


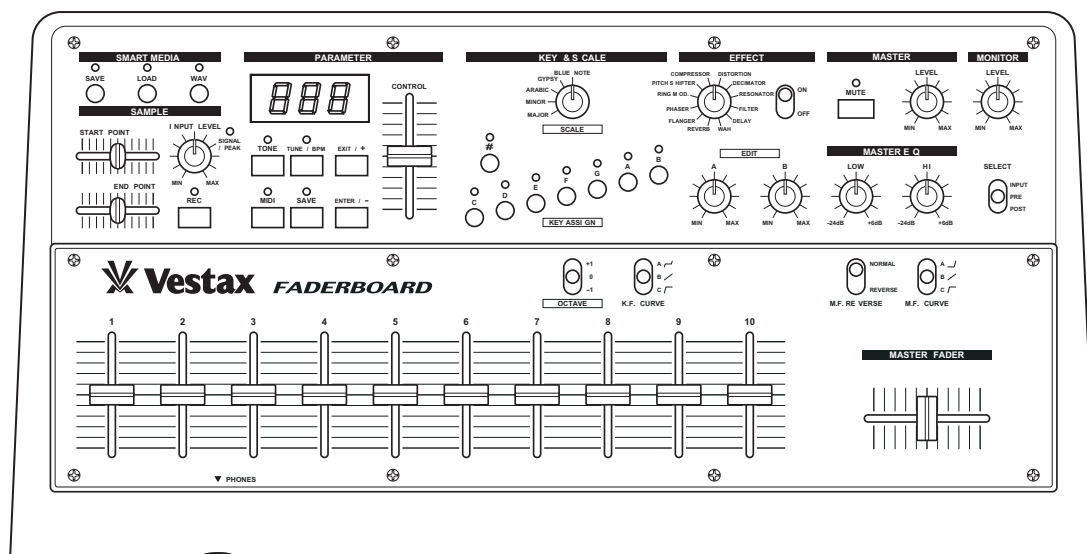

FADERBOARD

OWNER'S MANUAL



CONGRATULATIONS !

Thank you for purchasing the Vestax FADERBOARD. Please read this owner's manual carefully before use so that you fully understand all of the special features and can enjoy full use of this product.

CONTENTS

IMPORTANT SAFEGUARDS	3
FEATURES-IN BRIEF	4
GETTING STARTED	5
CREATING AND PERFORMING	7
USER DEFINED PROGRAM / SAMPLE BANKS	10
USING THE SMART MEDIA FEATURE	12
SETTING MIDI CHANNEL & MIDI MODE	14
EFFECT	15
ERROR MESSAGE	17
APPENDI X	18
WARRAN TY	20
SPECIFICATIONS	20



CAUTION



RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within a product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT
EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH BLADE OF
PLUG TO WIDE SLOT, FULLY INSERT

ATTENTION : POUR EVITER LES CHOCS ELECTRIQUES,
INTRODUIRE LA LAME LA PLUS LARGE DE LA
FICHE DANS LA BORNE CORRESPONDANTE DE LA
PRISE ET POUSSER JUSQU' AU FOND

IMPORTANT SAFEGUARDS

READ BEFORE OPERATING EQUIPMENT

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. Read Instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions-The safety and operating instructions should be retained for future reference.
3. Heed Warnings-All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions-All operating and use instructions should be followed.
5. Cleaning-Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments-Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture-Do not use this product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories-Do not place this product on an unstable surface. The product may fall, causing serious injury to both child or adult, and serious damage to the appliance. Use only with a surface, or table recommended by the manufacturer, or sold with this product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by manufacturer.
9. Ventilation-Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The unit should never be placed on an uneven surface(eg. bed) during operation. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power sources-This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply at the place of use consult your appliance dealer or local power company.
11. Grounding or Polarization-This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If this should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power-Cord Protection-Power supply cords should be routed so that they are not likely to be walked on or squashed by items placed upon or against them, paying particular attention to cords, plugs, attachments, other receptacles, and the point where they exit from the appliance.
13. Protective Attachment Plug-This appliance is equipped with an overload protection device/plug. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that matches the specifications of the original plug.
14. Lightning-For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
15. Overloading-Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
16. Object and Liquid Entry-Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. Servicing-Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified personnel.
18. Damage Requiring Service-Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power-supply cord or plug is damage.
 - b. If liquid has been spilled or objects have fallen into this product.
 - c. If this product has been exposed to rain or water.
 - d. If this product does not function under normally conditions Adjust only those controls that are covered by this operating manual. An improper adjustment of other controls may result in damage and will likely require extensive work by a qualified technician to restore the product to its normal operation.
 - e. If this product has been dropped or the cabinet has been damaged.
 - f. When the product exhibits a distinct change in performance-this indicates need for service.

19.Replacement Parts-When replacement parts are required, be sure the service technician has used replacement parts as specified by the manufacturer or which match the specifications of original parts.
Unauthorized substitutions may result in fire, electric shock or other hazards.

20.Safety Check-Upon completion of any service or repairs to this product, ensure that the service technician performs a comprehensive safety check to determine that the product is in correct functioning condition.

21.An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



FEATURES - IN BRIEF

The FADERBOARD is a visionary combination of melodic and percussive instruments with advanced mixing, sampling and effects control features that offers a completely new and original approach to creative music production and performance.

The FADERBOARD utilizes faders, like that on a DJ mixing console, to create a feel similar to that of a percussive instrument. These faders, justly named "KEY FADERS" produce sounds in a similar fashion to a modern keyboard. However, due to the percussive nature of a fader, you need to move it up and down to create sound, it is possible to produce extremely quick percussive patterns that would not necessarily be possible with a keyboard.

Like a mixing console, the FADERBOARD has a MASTER FADER (MF) which controls the output signal to your sound system, mixer and or headphones. This MF can be reversed and the curve set to a normal, sharp or flat setting.

To give these "KEY FADERS" sound, the FADERBOARD has thirty (30) onboard Synthesizer Sounds, ten (10) Drum / Percussion Sounds and up to ten (10) User Defined Sound Banks (Sample Banks).

The entire "KEY FADER" registry can be assigned to several keys. These being; C,D,E,F,G,A or B. Further, each of these assigned keys can be raised (#) by using the SHARP SWITCH. There is also a OCTAVE SWITCH that allows you to switch to an octave one above and one below the standard middle C setting.

In addition to the onboard sounds the FADERBOARD also allow for some serious production connections. MIC INPUT, PHONO INPUT and LINE INPUT. These inputs can be used to produce samples (using the User Defined Programs) or can allow the FADERBOARD to be used as a mixing console or effects unit.

The FADERBOARD utilizes Smart Media (SM) technology. There is a SM Card slot on the rear panel of the FADERBOARD that allows you to upload your own pre-produced samples or tracks. The SM feature is able to read either WAV or AIFF data.

To increase the production effectiveness of the FADERBOARD there is both a LINE OUTPUT and MIDI OUTPUT.

The MIDI OUTPUT on the FADERBOARD can be used to trigger external MIDI devices, such as a drum machine or effects module, and can also be used to facilitate the recording of original materials.

There are twelve (12) preset effects onboard the FADERBOARD. These include Wah, Reverb, Flanger, Phaser, Ring modulation, Pitch shifter, Compressor, Distortion, Decimator, Resonator, Filter and Delay. It is also possible to modify the parameters of each effect by using the EDIT VOLUME A and B.


2 Band MASTER EQ.

Three (3) step monitor feature.

GETTING STARTED

1. GETTING CONNECTED

- This device uses a DC power adaptor. First plug the adaptor into a ADAPTOR JACK and then plug the adaptor into a power outlet. Make sure that the power outlet you are about to use corresponds with the information provided on the face of the adaptor. Failure to plug this unit into the correct power supply may result in shock to users and inoperability of this device.
- If you are not using headphones use the LINE OUTPUT found on the rear panel of this device to connect to a suitable mixer, amplifier or sound system.

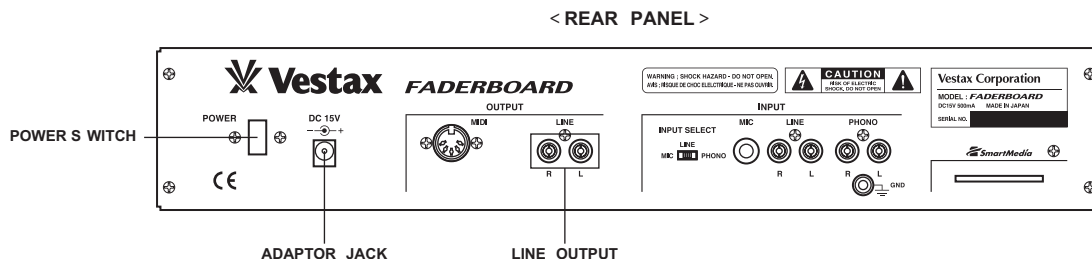


Please be sure to turn off all the volumes of external devices such as amplifier when the main power is turned on / off.

2. GETTING SOUNDS

- Turn this device on. The POWER SWITCH is found on the rear panel.


Master Level. Set your master level to the desired level. The master level essentially sets the volume for this device. To the left of the MASTER LEVEL VOLUME is a MUTE SWITCH. When mute is on, the LED above the switch will light up. Whilst mute is active no sound will be outputted.

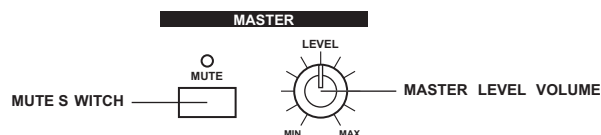


- **MASTER FADER.** Whereas the master level is set as above, the MASTER FADER (MF) controls the actual signal output in an on/off and volume basis. In its primary position the MF produces sound as it moves away from the farthest right setting.

MASTER FADER REVERSE. The MF can be reversed so that sound is produced as it moves from left to right. To reverse the MF use the MF REVERSE SWITCH located on the top panel above the MF. You can also set the curve on the MF.


There are three (3) settings to choose from. Curve A is a flat slope; curve B is a normal slope and curve C is sharp slope.

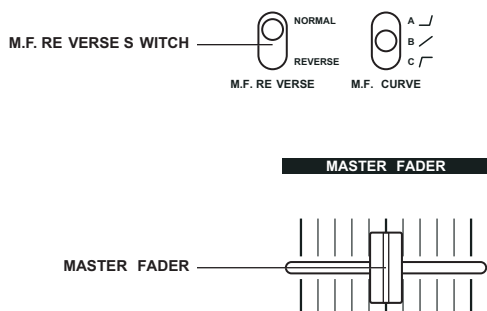



M .F. REVERSE SWITCH
" NORMAL " POSITION

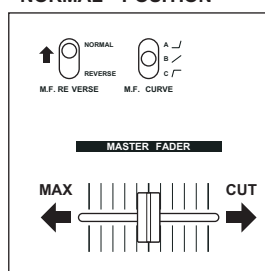

M .F. REVERSE SWITCH
" REVERSE " POSITION

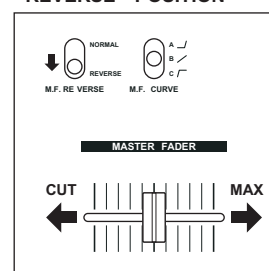


- **KEY FADER Position.** Depending on the sound setting is how the KEY FADERS will work. Essentially the KEY FADERS are an on/off signal for a particular sound, much like that on a modern keyboard/synthesizer. As you move the KEY FADER up (towards the rear panel) you will produce sound.

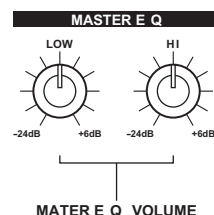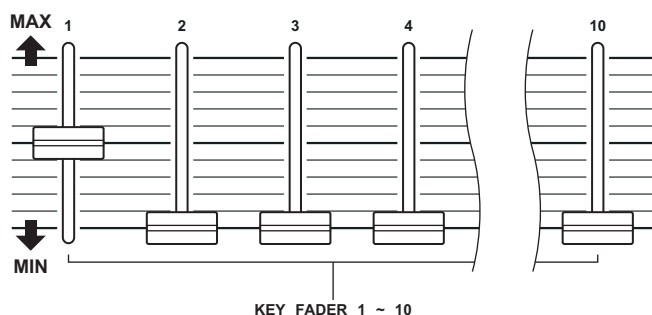

Please take care when setting the level on your FADERBOARD, mixer and amplifier to avoid any kind of damage to listeners or equipment.

3. USING HEADPHONES

- To use headphones first plug a suitable pair of headphones into the HEADPHONE JACK and set the monitor level using the MONITOR LEVEL VOLUME. The HEADPHONE JACK is located on the front panel of this device.
- Using the MONITOR SELECT SWITCH select the desired signal to be heard.

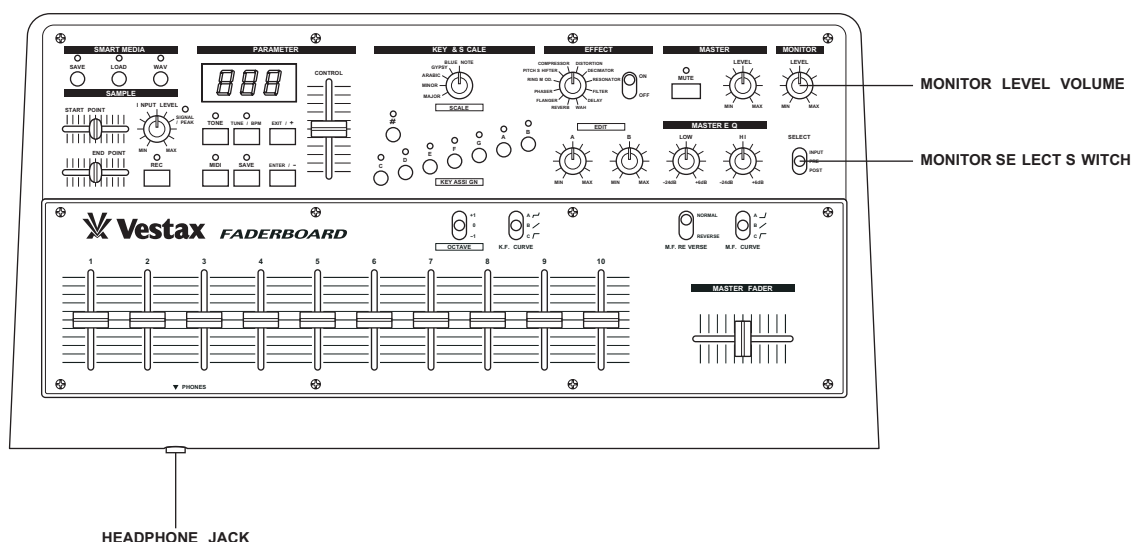

There are three settings INPUT, PRE and POST.

- | | |
|--------------|---|
| INPUT | This setting allows you to monitor any PHONO, LINE or MIC sources that have been connected to the rear panel of this device. |
| PRE | This setting allows you to monitor all sources regardless of the position of the MF. |
| POST | This setting allows you to monitor the master output signal. Thus the position of the MF will influence what you are able to monitor. |

CREATING & PERFORMING

As mentioned before, the FADERBOARD incorporates melodic and percussive elements to create a new and exciting instrument with advanced mixing, sampling and effects control features.


1. SETTING A TONE/SOUND/PROGRAM




Tone. To set a tone press the TONE SWITCH. When pressed the TONE LED will light up.

Select a Tone. Using the CONTROL FADER select a tone. It is also possible to set a tone by using the EXIT / + SWITCH and ENTER / - SWITCH.

There are thirty (30) preset Synth Programs (sounds), ten (10) preset Drum kits / Percussion Programs and ten (10) User Definable Program banks.

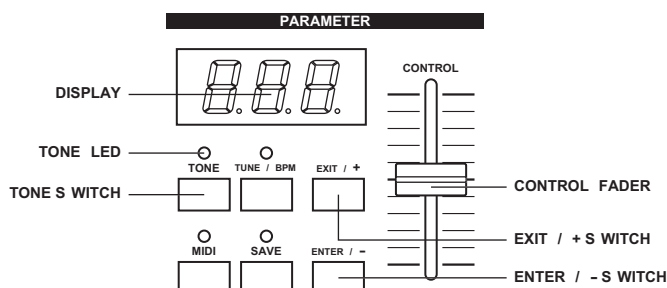Before being able to use a User Definable Program bank you must first record a sample. If there are no user banks currently recorded then the DISPLAY will show 0.



Synth Programs	<ul style="list-style-type: none"> • There are thirty (30) preset Synth Programs available. • Typically, a synth sound may be used like a modern day synthesizer. That is, each KEY FADER will have a corresponding musical note/tone (like a keyboard) that is subject to the current scale/key setting. • For more information please turn to page 18. 	<p>< DISPLAY > S.01~S.30</p> 
Drumkits / Percussion Programs	<ul style="list-style-type: none"> • There are ten (10) preset Drum kits / Percussion Programs available. • Typically, each KEY FADER will control a different sound and will work as a trigger for the sound in an on/off sense. • For more information please turn to page 18. 	<p>< DISPLAY > d.01~d.10</p> 
User Definable Program banks	<ul style="list-style-type: none"> • The User Defined Program banks allows for up to ten (10) samples to be recorded up to a maximum size of thirty (30) seconds. • Once recorded a sample can be played back by using the KEY FADERS. The root KEY FADER will play back the original version of the sample whilst each KEY FADER 'above' the root KEY FADER will play back the sample at an advanced pitch. • For more information please turn to page 10. 	<p>< DISPLAY > U.01~U.10</p> 

2. SETTING THE ROOT KEY AND THE SCALE.

There are seven (7) major scales / keys to select from on the FADERBOARD. Each of these can be further raised by a semitone.


SETTING THE ROOT KEY (BASIC KEY OF SCALE)

Setting Root Key of the Scale.

When you press KEY ASSIGN SWITCH (C~B), the LED lights and the key assigned to KEY FADER 1.

You can select a different scale / key mid play. The output signal will change instantly.

When you press , the LED lights and the root key turns into . To release setting, press again or press the other KEY ASSIGN SWITCH.

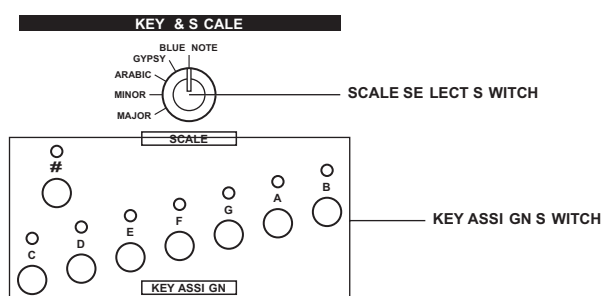

There is no in KEY ASSIGN SWITCH. In order to set , please select SWITCH from C ~ B in reference to page 18.

SETTING THE SCALE

There are five (5) possible scale types that may be selected on the FADERBOARD. Major, Minor, Arabic, Gypsy and Blue Note. For specific information regarding these scales please refer to the following chart.

	1	2	3	4	5	6	7	8	9	10
MAJOR	C	D	E	F	G	A	B	C	D	E
MINOR	C	D	E	F	G	A	B	C	D	E
ARABIC	C	D	E	F	G	A	B	C	D	E
GYPSY	C	D	E	F	G	A	B	C	D	E
BLUE NOTE	C	D	E	F	G	A	B	C	D	E

ARABIC (Double Harmonic Scale)


GYPSY (Hungarian Minor Scale)

Unfortunately it is not possible to select either harmonic or melodic minor on the FADERBOARD. In order to achieve this scale type, please use the SHARP () SWITCH to affect the 6th and 7th notes as and when required.

In addition to each root octave of the seven (7) scales / keys and variants the OCTAVE SWITCH allows you to adjust up one octave or down one octave. In combination with a synth sound it is possible to produce highly melodic compositions.

If you make a change to either the key/scale type or the octave the output signal will reflect this change immediately.

There are only eight (8) tones to a normal scale in any given octave. As there are ten KEY FADERS on the FADERBOARD following a complete octave progression there will be an additional two full tonal steps. This is only the case for Synth Programs and User Defined Programs.

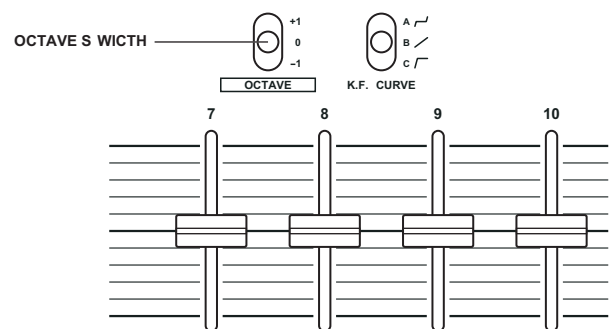

3. SETTING THE PITCH / TEMPO (BPM)


* For Synth Programs & User Defined Programs

To set the pitch use the TUNE / BPM SWITCH located next to the CONTROL FADER. When activated the LED will be illuminated.

Once activated, by using the CONTROL FADER you will be able to increase or decrease the playback speed of any KEY FADER controlled sound by up to $\pm 100\%$. The adjustment mechanism allows for 2% incremental changes. You are also able to use the EXIT / + and ENTER / - SWITCHES to control the changes.

The primary setting is 0%.

Any change will affect the output signal immediately.

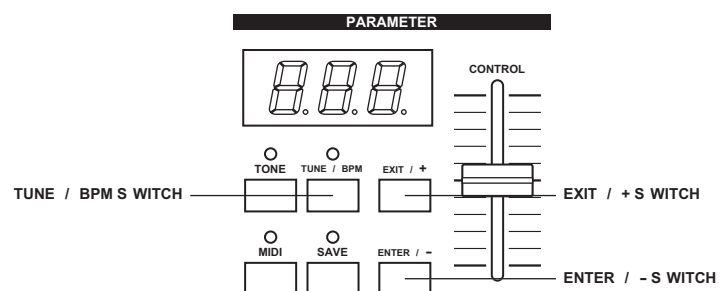

* For Drum / Percussion Programs

To set the tempo use the TUNE / BPM SWITCH located next to the CONTROL FADER. When activated the LED will be illuminated.


Once activated, by using the Control fader you will be able to increase or decrease the BPM of your drum/percussion loop by up to $\pm 100\%$. The adjustment mechanism allows for 2% incremental changes. You are also able to use the EXIT / + and ENTER / - SWITCHS to control the changes.

The primary setting is 0 BPM.

Any change will affect the output signal immediately.




4.ADJUSTING THE FADER CURVES

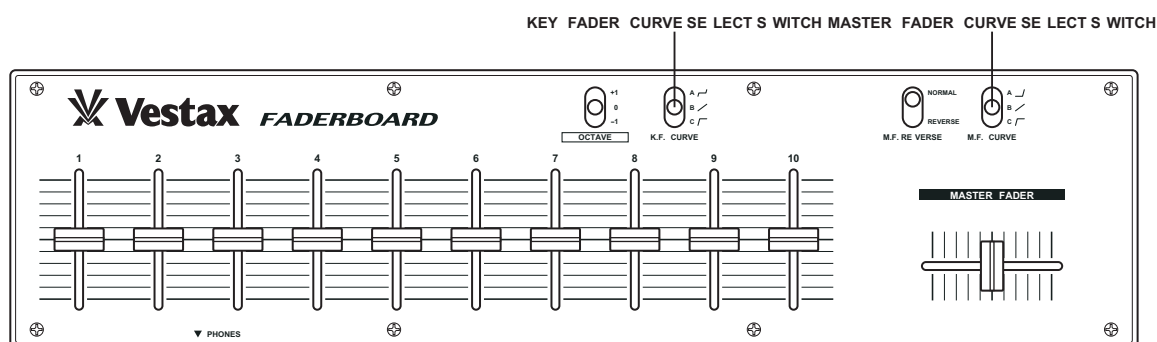On the FADERBOARD both the MASTER FADER and the KEY FADERS curves can be adjusted to suit your preferred playing style.






KEY FADER CURVE CONTROL

To set the KEY FADER Curve to your playing style use the K.F. CURVE SWITCH. When you make a selection, the entire KEY FADER registry is affected immediately. There are three (3) curve settings for the KEY FADERS. Each of these settings will affect how the fader not only activates the sound but how it also controls the volume of that sound.

- A  To set the KEY FADER curve to your playing style use the K.F. CURVE switch. When you make a selection, the entire KEY FADER registry is affected immediately.
- B  The smoothest setting, a type B curve is a gentle and gradual curve from open to full open.
- C  This curve becomes fully open very quickly. This setting is best when you are attempting to create staccato/percussive fader moves.

MASTER FADER CURVE CONTROL

To set the MASTER FADER Curve to your playing style use the M.F. CURVE SWITCH. When you make a selection the M.F. curve shape will change immediately. There are three (3) curve settings for the KEY FADERS. Each of these settings will affect how the fader not only activates the sound but how it also controls the volume of that sound.

- A  This setting will open slowly at first and then open quite quickly as the faders gets close to its full open point.
- B  The smoothest setting, a type B curve is a gentle and gradual curve from open to full open.
- C  This curve becomes fully open very quickly. This setting is best when you are cutting quickly.

USER DEFINED PROGRAM / SAMPLE BANKS





Essentially the User Defined Programs are onboard sample banks that you can use to record onto by using the various input options (LINE, PHONO, MIC) available. There are ten (10) available banks to which a maximum of thirty (30) seconds worth of samples can be recorded. These samples can be played back using the KEY FADERS, with each KEY FADER playing back the original sample at a different pitch.

In addition to being able to record onboard, you can record additional samples through the FADERBOARD onto a Smart Media Card.

There are a maximum of ten (10) User Definable sample banks. The total onboard recording space available cannot exceed thirty (30) seconds.

1. RECORDING A SAMPLE

- Connect your external source, from which you want to sample, to the FADERBOARD and select that input using the INPUT SELECT SWITCH on the rear panel of the FADERBOARD. There is 1 x LINE INPUT, 1 x PHONO INPUT and 1 x MIC INPUT.
 - If using a turntable make sure your connection to the phono terminal is also grounded. Use the GND TERMINAL provided on the FADERBOARD.
 - In addition to any external source you can record a sample from the onboard Synth Programs or Drum / Percussion Programs.
 - It is also possible to record a sample of combined external and internal sources.
- **INPUT LEVEL VOLUME.** If you have connected an external device make sure that you set the input level correctly to avoid overload of the circuitry. The SIGNAL / PEAK LED will flash if your input level is too high. To adjust the input level use the INPUT LEVEL VOLUME.
- **Standby Mode.** Push the REC SWITCH once to set the sample function to standby. When in standby mode the REC LED and the DISPLAY will flash. If you want to exit from standby mode and NOT record, press either the TONE or EWIT / + SWITCH.
- **Begin Recording.** Press the REC SWITCH again to start recording your sample. When you are recording a sample the REC LED will be illuminated and the DISPLAY will flash.
- **End Recording.** Press the REC SWITCH once more. When this is done the SAVE LED will start flashing and the DISPLAY will show an illuminated "U".

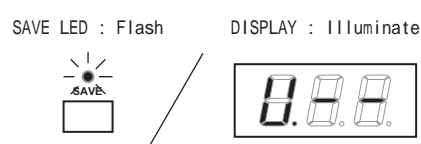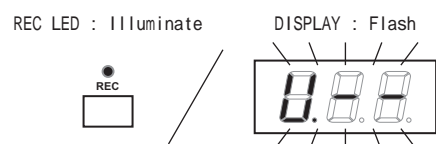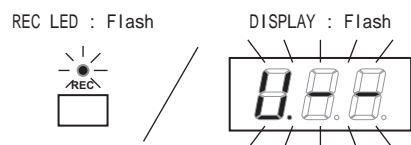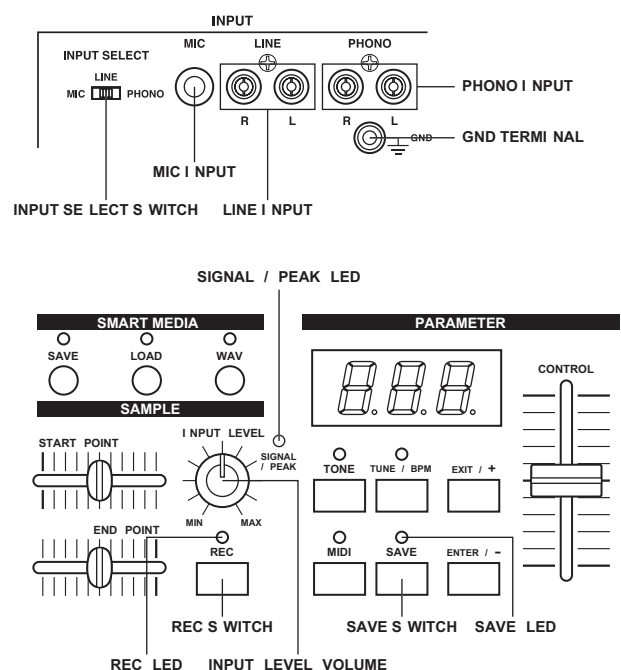


By ending the recording process you have managed to record a sample. This sample is not yet saved to a User Defined Program bank. You can listen to your sample by using the KEY FADERS before you save it.

2. SAVING A SAMPLE

- Once you have recorded a sample you are able to play it back by using the KEY FADERS. To check the quality of your sample, first make sure that you have lowered the volume of your external source to a suitable level or turned this external source off. Please note that if the OCTAVE SWITCH is not set to '0' then playback of your sample will not sound the same as your external source.
- Saving. If you are happy with your sample press the SAVE LED. By pressing the SAVE LED, the FADERBOARD will look for the lowest numbered available User Defined Program Bank to save to. This bank number will be displayed on the DISPLAY. You can also select a preferred number, assuming it is available by using the CONTROL FADER. If a User Defined Program Bank is empty there will be a dot following the number. (As illustrated).

You can overwrite a pre-recorded program bank so please take care when selecting a preferred bank number.

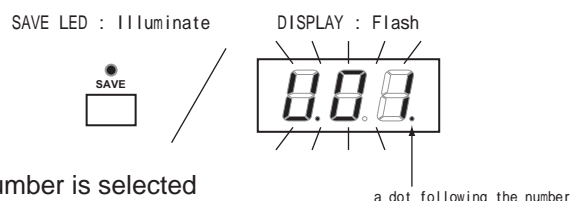


- Once an available or desired User defined program bank number is selected press the ENTER / - SWITCH to complete the saving process. Once pressed the DISPLAY will flash. When the saving is completed the DISPLAY will stop flashing.
- This sample that you have now recorded can be used over and over again by selecting the appropriate bank number and then using the KEY FADERS to control output.

To access a User Defined Program / Sample press the TONE SWITCH and then select from the program banks available. You can use either the CONTROL FADER or the EXIT / - and ENTER / + SWITCH to select an available program.

3. SETTING THE START AND END POINTS FOR A SAMPLE

The start and end points of any given sample can be adjusted according to your needs. To control the start and end points use the START POINT / END POINT FADERS.

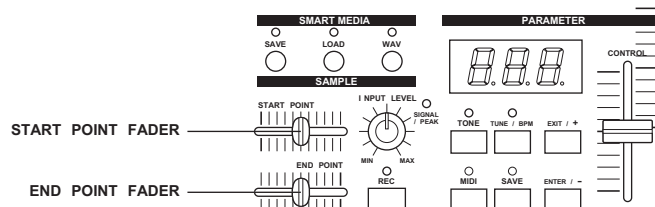

- Select an appropriate sample and start it playing by using the KEY FADERS. To adjust the start point move the START POINT FADER. An initial movement from left to right (assuming the fader is set to its full position) will result in the sample starting from a point after which it was recorded. Adjustments to the end point can be made in the same manor but will work from right to left. It is also possible to reverse your sample by moving the start point all the way to the right and the end point all the way to the left.
- Saving start and end point adjustments. When the start or end point of a sample is altered the SAVE LED will flash. To save these changes press the SAVE SWITCH and select the appropriate User Defined Program bank to save to.
- Once an available or desired User Defined Program bank number is selected press the ENTER / + SWITCH to complete the saving process. Once pressed the DISPLAY will flash. When the saving is completed the DISPLAY will stop flashing.

When you change or renew the play range on the User Defined Program and save it, the other space will automatically be deleted. If you do not wish to save at all, Please use another bank.

4. DELETING A USER DEFINED PROGRAM BANK

- Select the User Defined Program to be deleted by using the CONTROL FADER or the EXIT / - and ENTER / + SWITCHS.
- Press the TONE and SAVE SWITCHS simultaneously to start deleting the selected program bank. The program bank chosen will flash.

- Press enter to complete the deletion process. Once pressed the DISPLAY will flash. When deleting is completed the DISPLAY will stop flashing and the User Defined Program.


If a User Defined Program is available, thus empty, a dot will follow the number displayed.

USING THE SMART MEDIA FEATURE

The FADERBOARD is equipped with a Smart Media feature that you can save User Defined Programs that you have created on the FADERBOARD to. You are also able to read files, in the applicable formats (WAV, AIFF) to be used in your creation process.

1. FORMATTING SMART MEDIA FOR THE FADERBOARD

- To be able to use the Smart Media (SM) feature you first need to format your SM card.
- Insert your SM Card into the SMART MEDIA SLOT provided on the rear panel.
- Press the SMART MEDIA SAVE SWITCH located at the top left of the FADERBOARD. If your card is not yet formatted or incorrectly installed the DISPLAY will show ' For ' .
- To continue formatting press the ENTER / - SWITCH. To end the formatting process press the EXIT / + SWITCH or remove the SM Card

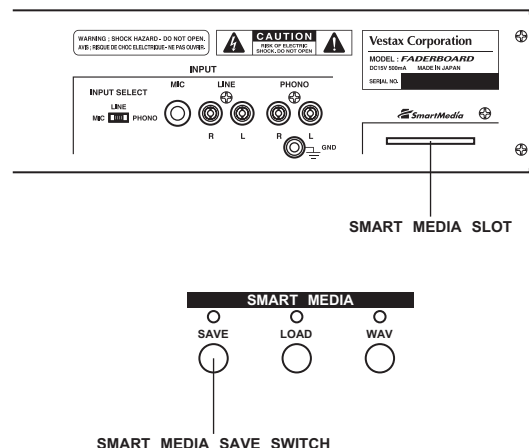

Formatting your Smart Media Card will erase any previously saved data.

If your Smart Media Card was formatted on anything other than the FADERBOARD, it is likely that the FADERBOARD will not be able to read your data. Please format your Smart Media Card on the FADERBOARD.


2. SAVING ALL USER DEFINED PROGRAM BANKS TO SMART MEDIA

You are only able to transfer ALL User Defined Programs / samples created on the FADERBOARD to your Smart Media Card. When transferring all User Defined Programs / sample banks to your SM Card, ensure that you have more than 1152KB of available storage capacity prior to commencing your transfer.

- Insert your SM Card.
- Press the SMART MEDIA SAVE SWITCH
- The DISPLAY will show the current User Defined Program bank numbers.
- To select an appropriate bank use the CONTROL FADER. When saving a User Defined Program to a SM card, the DISPLAY will show User Defined Program numbers in the following manner. ' - ' = EMPTY, ' [1] ' = FULL
- Press the ENTER / - SWITCH to begin saving to your SM Card.

3. READING ALL AVAILABLE SAMPLE FILES FROM SMART MEDIA

- Insert your SM Card.
- Press the SMART MEDIA LOAD SWITCH.
- The DISPLAY will show the programs available.
- Press the SMART MEDIA LOAD SWITCH again.
『 ALL 』 will be displayed on the DISPLAY and the LED will be illuminated.
- Press the ENTER / - SWITCH and reading will commence. Once pressed the DISPLAY will flash. Upon completion, the DISPLAY will stop flashing.

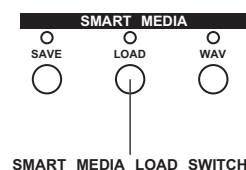


4. READING ONE SAMPLE FILE FROM SMART MEDIA

- Insert your SM Card.
- Press the SMART MEDIA LOAD SWITCH.
- The DISPLAY will show the programs available.
- Press the SMART MEDIA LOAD SWITCH again. 『 ALL 』 will be displayed on the DISPLAY and the LED will be illuminated.
- Using the CONTROL FADER select the appropriate program number to be read. Once selected the SAVE LED will be illuminated.
- Press the SMART MEDIA LOAD SWITCH once more and the selected file will start being read.
*** If you press the SMART MEDIA LOAD SWITCH again the file will be played back.
- To save the SM sample file press the SAVE SWITCH. The lowest available onboard space will be selected and then displayed or you can select another program space (if available) by using the CONTROL FADER.
- Press the ENTER / - SWITCH to complete the reading & then saving of this SM sample file. Once pressed the DISPLAY will flash. When this process is completed the DISPLAY will no longer be flashing.

5. READING A WAV or AIFF FILE FROM SMART MEDIA

- Insert your SM Card.
- Press the SMART MEDIA WAV SWITCH.
- Select an appropriate file by using the CONTROL FADER.
Once selected the SAVE LED will start flashing.
- Press the WAV SWITCH again and the file will be read into the FADERBOARD and ready for playback. By pressing the WAV SWITCH again, this file will be played back.
- To save the SM sample file press the SAVE SWITCH. The lowest available onboard space will be selected and then displayed or you can select another program space (if available) by using the CONYROL FADER.
- Press the ENTER / - SWITCH to complete the reading & then saving of this SM sample file. Once pressed the DISPLAY will flash. When this process is completed the DISPLAY will no longer be flashing.

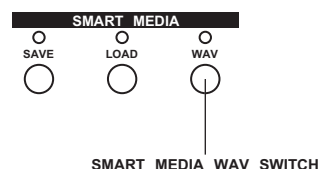

CREATING WAV & AIFF FILES

In order to use a WAV or AIFF file on the FADERBOARD the following conditions must be satisfied.

- File type must be either WAV or AIFF
- 8 Bit or 16 Bit mono
- The file must be named 00 ~ 99.wav or 00 ~ 99.aif. That is, if the file is to be titled 1 then the file name must be 01.wav or 01.aif. If by chance you have awarded both a WAV and an AIFF file the same number/name, the WAV file will take precedence.
- The volume level of a WAV or AIFF file cannot be adjusted. This level needs to be determined during the creation of the file.
- To have a sample play back at its creation pitch rate it must be created at 32Hz. If created outside this Hz range, you will need to adjust the playing pitch with the FADERBOARD.
- Both WAV and AIFF will assume the following parameters, 8 bit / 32 KB, 16 bit / 64 KB. A sample should take approximately one (1) second to be read.

Smart Media is a Toshiba licensed technology.



SETTING MIDI CHANNEL & MIDI MODE



MIDI is an acronym for Musical Instrument Digital Interface. A MIDI device works in a similar way to a television. That is, if the receiving device and the transmitting device are both set to the same channel then the transmitted information can be monitored on the receiving device.

On the FADERBOARD, the MIDI output can be used to transmit data to an external device, such as a drum machine, PC or sampler, so long as that device is MIDI capable.

When synchronizing an external MIDI device to the FADERBOARD, please read the user manual / guide provided with your external device in order to ensure that your synchronization is effective.

1. SETTING THE MIDI CHANNEL

- Connect the MIDI OUTPUT on the FADERBOARD to the MIDI input of your external MIDI device.
- Press the MIDI SWITCH. When MIDI is active the MIDI LED will be illuminated.
- There are sixteen (16) MIDI channels to select from on the FADERBOARD. To make a selection use the CONTROL FADER. Your external MIDI device will determine the channel needed to be selected. Once the correct channel has been identified the SAVE LED will be illuminated.
- Press the SAVE SWITCH and the DISPLAY will show  -  Press the ENTER / - SWITCH to set the MIDI channel.

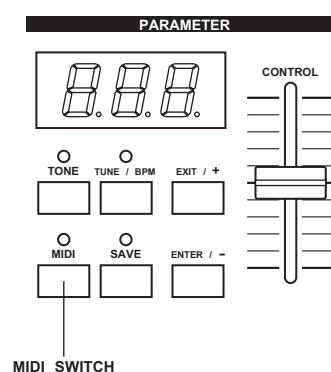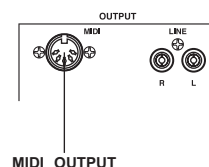

2. MIDI MODE SETTINGS

- Pressing MIDI SWITCH for one (1) second, MIDI mode comes to effective.
- Select the note number for output format either 『 nt1 』 or 『 nt2 』 by CONTROL FADER.

『 nt1 』	The note number created under the setting of OCTAVE SWITCH, KEY ASSIGN SWITCH, SCALE SELECT SWITCH will come out from MIDI OUTPUT. CONTROL FADER adjusts the program (TONE) of the MIDI receiver.		
『 nt2 』	The fixed note number is assigned to each KEY FADER. The range of the note number is from 35 to 64 and OCTAVE SWITCH determines their range as below.		
	• OCTAVE SWITCH	-1	35 ~ 44
	• OCTAVE SWITCH	0	45 ~ 54
	• OCTAVE SWITCH	+1	55 ~ 64

- The DISPLAY shows 『 - 』 after pressing SAVE SWITCH and MIDI mode is set with ENTER / + SWITCH on.

READ ONLY PROGRAM

In order to allow you to use the various effects and other features on the FADERBOARD for a sound source originating from an external MIDI device, there is a Read Only Program. This program allows you to control the output source from an external MIDI device through the FADERBOARD.

This program is found after program d.10 (Drum / Percussion Program #10) and is easily selected using the CONTROL FADER or the EXIT / - and ENTER / + SWITCHS.


Connect your external MIDI device to the MIDI out on the rear panel of the FADERBOARD and then select the Read Only Program to begin use.

EFFECT

On the FADERBOARD, you can select and use one of twelve types of effect for each pattern.

The effect can be selected by using EFFECT SELECT SWITCH, and can be turned on/off by using EFFECT ON/OFF SWITCH.

Use the two knobs (EDIT VOLUME A, EDIT VOLUME B) to adjust the parameters, which will differ depending on the selected effect.

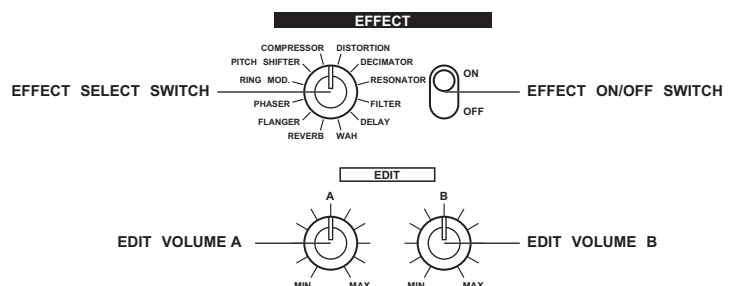

Some time may be required for the effect to begin applying when you switch patterns.

EFFECT TYPES AND PARAMETERS

REVERVE

This simulates the reverberation and acoustics of a plate reverb unit.

EDIT A	< TIME >	The reverb time will lengthen as the knob is rotated toward the right.
EDIT B	< LEVEL >	The level of the reverberation will increase as the knob is rotated toward the right.

FLANGER

Flanger and chorus are effects that modulate the pitch of a slightly time-delayed copy of the sound and add it to the original sound to create a sence of spaciousness, modulation, and vibrato.

EDIT A	< LFO RATE >	Adjusts the LFO speed of flanger/chorus. The LFO speed will become faster as the knob is rotated toward the right.
EDIT B	< DEPTH >	Adjusts the depth of flanger/chorus effect. The effect will change from chorus to flanger as the knob is rotated toward the right.

PHASER

This effest adds modulation to the sound by mixing a cyclically phase-shifted sound with the original sound.

EDIT A	< LFO RATE >	Adjusts the LFO speed of the phaser. The LFO speed will become faster as the knob is rotated toward the right.
EDIT B	< DEPTH >	Adjusts the depth of phaser. The modulation will become greater as the knob is rotated toward the right.

RING MOD. (ring modulation)

This effect applies modulation to the sound in order to create metallic resonances or unusual sound effects.

EDIT A	< FREQUENCY >	Specifies the frequency of the modulation that will be applied. The frequency will rise as the knob is rotated toward the right.
EDIT B	< BALANCE >	Specifies the balance of the effect sound and direct sound. As the knob is rotated toward the right, the effect sound will increase and direct sound will decrease.

PITCH SHIFTER

This effect shifts the pitch.

EDIT A	< PITCH >	Specifies the amount of pitch shift. When the knob is in the center position, the output pitch will be the same as input pitch. As the knob is rotated toward the left the pitch will become lower, and as the knob is rotated toward the right the pitch will become higher.
EDIT B	< DRY LEVEL >	This adds the original sound to the pitch-shifted sound. As the knob is rotated toward the right, increasing amounts of the original sound will be added to the effect sound.

COMPRESSOR

A compressor boosts low level sounds and reduces high level sounds in order to minimize differences in volume and make the sound more consistent.

EDIT A	< SENSITIVITY >	Specifies the sensitivity of the compressor. When the knob is in the far left position, there will be no effect. As the knob is rotated toward the right, the effect will apply more strongly.
EDIT B	< ATTACK >	Specifies the attack speed until the compressor begins to take effect. The attack will become slower as the knob is rotated toward the right.

DISTORTION

By boosting the volume appropriately, thi effect causes the sound to distort and produces a rich overtone structure.

EDIT A	< GAIN >	Specifies the degree of distortion. The sound will be distorted more greatly as the knob is rotated toward the right.
EDIT B	< LEVEL >	Adjust the output level. The output level will increase as the knob is rotated toward the right.

DECIMATOR

This effect lowers the sampling frequency and the number of sampling bits, producing a grainy sound characteristic of cheap samplers.

- | | | |
|---------------|--|---|
| EDIT A | < SAMPLING FREQUENCY > | Rotating the knob toward the right produces a more lo-fi sound, and rotating it toward the left produces a more hi-fi sound. |
| EDIT B | < NUMBER OF SAMPLING BITS > | Rotating the knob toward the right will produce a sound typical of fewer bits (lo-fi), and rotating it toward the left will produce a sound typical of more bits (hi-fi). |

RESONATOR

This adds a specific frequency region to the original waveform that has been boosted by a band pass filter

- | | | |
|---------------|-----------------------------------|--|
| EDIT A | < CUTOFF FREQUENCY > | This adjusts the cutoff frequency of the band pass filter. The cutoff frequency will rise as you turn the knob toward the right. |
| EDIT B | < RESONANCE > | This boosts the sound in the region of the cutoff frequency, adding a distinctive character to the sound. The resonance will increase as you turn the knob toward the right. |

FILTER

This is a low pass filter with resonance. It cuts the overtones that are above the cutoff frequency, producing a milder tone.

- | | | |
|---------------|-----------------------------------|--|
| EDIT A | < CUTOFF FREQUENCY > | Adjusts the cutoff frequency of the low pass filter. The cutoff frequency will rise as you turn the knob toward the right. |
| EDIT B | < RESONANCE > | This emphasizes the sound in the region of the cutoff frequency, adding a distinctive character to the sound. |

DELAY

This is a Delay with delay time and feedback.

- | | | |
|---------------|-----------------------------------|--|
| EDIT A | < TIME > | Adjusts the delay time (11 ms ~ 2048 ms). The delay time will be long as you turn the knob toward the right. |
| EDIT B | < FEEDBACK / LEVEL > | Adjusts the level of the delay sound and the amount of feedback (the number of delay repeats). Rotating the knob toward the right will increase the level of delay sound, and will also increase the amount of feedback. |

WAH

The cutoff frequency is controlled by LFO.

- | | | |
|---------------|-----------------------------------|---|
| EDIT A | < LFO RATE > | Adjusts the LFO speed of the cutoff frequency. The LFO speed will rise as you turn the knob toward the right. |
| EDIT B | < CUTOFF FREQUENCY > | Adjusts the cutoff frequency. The cutoff frequency will rise as you turn the knob toward the right. |

ERROR MESSAGE

- | | |
|-------------|---|
| Er.1 | Data is unable to be read. |
| Er.3 | There is insufficient memory on your Smart Media (SM) Card. To use the SM feature on the FADERBOARD you must have a SM Card with more than 4 MB of storage space. |
| Er.4 | Unable to read SM content. This may be because the file type is incompatible with the FADERBOARD. The FADERBOARD is able to read both WAV and AIFF files. |
| Er.7 | Error during saving to Smart Media. Please try again. |
| Er.8 | No Files Found. Either your SM Card is empty or the SM Card is corrupt. |
| Er.9 | Can't access data. SM Card protective seal is still intact. |

APPENDIX

Fig.1 SYNTH PROGRAMS

S.01 : Saw-Pro Synth	S.11 : DWGS Digital	S.21 : M1 Pick Bass
S.02 : Pulse 25%-MG	S.12 : 5th Sine	S.22 : Slap Bass Mix
S.03 : Square	S.13 : 5th Square	S.23 : M1 Organ
S.04 : Triangle-MG	S.14 : Sync Tri-MS2k	S.24 : DWGS Clav
S.05 : Pure Sine	S.15 : HPF Sweep-MS2k	S.25 : Voice VS
S.06 : Sine Kick Bass	S.16 : Cyber Bass-Z1	S.26 : Pad Chord maj 7
S.07 : Dark Bass	S.17 : Ring Bass-MS2k	S.27 : M1 Piano Chord Set
S.08 : Additive Sine	S.18 : Vibrato Sine	S.28 : E.P. Chord Set
S.09 : DWGS Bell	S.19 : NRG Hit	S.29 : Guitar Chord Set
S.10 : Square Oct Mix	S.20 : Ac.Bass	S.30 : Noise

Synth Program S.27, S.28 and S.29 are Chord based programs. Using the OCTAVE SWITCH may effect the balance of these programs and may result in the loss of the highest note in a chord due to that particular note not being available.

Fig.2 DRUM KITS / PERCUSSION PROGRAMS

	KEY FADER 1 Bass Drum 1	KEY FADER 2 Bass Drum 2	KEY FADER 3 Snare 1	KEY FADER 4 Snare 2	KEY FADER 5 Hihat 1	KEY FADER 6 Hihat 2	KEY FADER 7 Kit 1	KEY FADER 8 Kit 2	KEY FADER 9 Sound 1	KEY FADER 10 Sound 2
d.01 : OG	BD-Dark	BD-99 Dist 1	SD-Dry 4	SD-R&B 4	HH-88 Cl	HH-88 Op	SD-88 Rim	HH-Std 1 Op	HH-Big Chunk Cl	HH-Big Chunk Op
d.02 : Bump	BD-99 1	BD-99 2	SD-Ambi 2	SD-Dry 2	HH-Std 1 Cl	HH-Std 2 Cl	Ride-Edge 2	Zap 1	Synth SE-2	Reverse-BD
d.03 : Tight	BD-99 Dist3	BD-Dry 2	SD-88 2	SD-Ambi 1	Cabasa-Normal	HH-Old Cl	Crash-99	Crash-Normal	Tom-99	Tom-88
d.04 : Mirror Shaker	BD-88 1	BD-88 2	Clap-99	SD-88 1	HH-99 Cl	HH-99 Op	Reverse-SD 1	Reverse-Crash	Claves	Reverse-SD 2
d.05 : Smoov	BD-Dry 4	BD-Squash	SD-R&B 1	SD-Rim 2	HH-Crisp Cl	HH-R&B Cl	Bongo-Hi Op	Bongo-Slap N5	Bongo-Lo Op	Bongo-Lo N5
d.06 : New Jack	BD-Defness	BD-Defness/OHH	SD-Hip	SD-R&B 3	HH-Crisp Op	HH-Std 2 Op	Ride-99	BD-Dry 2	SD-77	SD-Disco
d.07 : Fun House	BD-Analog	BD-ZAP	Clap-88	SD-99 1	Tambourine-Acc	HH-Old Op	Agogo	Synth Perc 1	Cowbell	Cha Cha Bell
d.08 : Rough	BD-Jungle	BD-99 Dist 2	SD-Jungle	SD-Piccolo 2	Ride-Edge 1	Tom-Std Hi	Tom-Std Lo	Tom-Std Floor	Tom-Jazz Hi Rim	Tom-Jazz Hi
d.09 : Tabla	BD-Dry 2	Taiko-Rim	Tabla-Na	Tabla-Tin	Tabla-Mute 1	Tabla-Mute 2	Tabla-Baya Mute 2	Cabasa-Dist Up	Cabasa-Dist Down	Tsuzumi
d.10 : Conga	Conga-Hi Slap 1	Conga-Hi Slap 2	Conga-Hi MtSlap	Conga-Lo Slap	Conga-Lo Slap N5	Conga-Lo MtSlap	Cabasa-EXB	Guero-Long	Samba Whistle	Udu

Following the Drum / Percussion Program d.10 is Read Only MIDI Program.

Fig.3 ROOT KEY QUICK REFERENCE

1/2 STEP	1	2	3	4	5	6	7	8	9	10	11	12	13	14
ROOT KEY	C	C	D	D	E	E	F	F	G	G	A	A	B	B
SUBSTITUTE	—	D	—	E	—	F	—	G	—	A	—	B	—	C

Fig.4 EFFECTS OF THE OCTAVE SWITCH ON THE KEY FADERS

KEY FADER	1	2	3	4	5	6	7	8	9	10
OCTAVE : +1	C	D	E	F	G	A	B	C	D	E
OCTAVE : 0	C	D	E	F	G	A	B	C	D	E
OCTAVE : -1	C	D	E	F	G	A	B	C	D	E

Fig.5 BPM PARAMETERS

BPM Range	Increment of Change
0 ~ 20	20
20 ~ 30	5
30 ~ 170	1
170 ~ 240	2
240 ~ 400	5
400 ~ 800	10
800 ~ 999	100

MIDI Implementation Chart

FUNCTION...		Transmitted	Recognized	Remarks
Basic channel	Default	1 - 16	×	Memorized
	Changed	1 - 16	×	
Mode	Default		×	
	Messages	×	×	
	Altered	* * * * *	×	
Note number :		35 - 88	×	
	True voice	* * * * *	×	
Velocity	Note ON	×	×	
	Note OFF	×	×	
After Touch	Polyphonic	×	×	
	Channel	×	×	
Pitch Bender		×	×	
Control Change				
Program Change :		0 - 50	×	
	True#	* * * * *	×	
System Exclusive		×	×	
System Common	: Song Pos	×	×	
	: Song Sel	×	×	
	: Tune	×	×	
System Realtime	: Clock	×	×	
	: Commands	×	×	
Aux Messages	: Local ON/OFF	×	×	
	: All Notes OFF	×	×	
	: Active Sense		×	
	: Reset	×	×	
Notes				

Mode 1 : OMNI ON, POLY
 Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO
 Mode 4 : OMNI OFF, MONO

○ : Yes
 × : No

WARRANTY

The warranty might vary from country to country. Each distributor has their own warranty system in accordance with the country or state regulations or laws. Vestax observes the manufacturing country's regulation.

SPECIFICATIONS

NORMAL INPUT LEVEL / IMPEDANCE

PHONO :	-45 dBv / 47 k
LINE :	-10 dBv / 10 k
MIC :	-50 dBv / 15 k

NORMAL OUTPUT LEVEL / IMPEDANCE

LINE :	0 dBv / 1 k
HEADPHONE :	150 mW / 22 k

FREQUENCY RESPONSE : 50 ~ 14 kHz

S/N RATIO : < -70 dBv

POWER SUPPLY : DC 15 V 500 mA

POWER CONSUMPTION : 5 W

DI MENSIONS : W 460 x D 240 x H 97 mm

WEIGHT : 4 kg

Through every attempt is made to ensure that the information contained within this user guide is accurate, changes in specifications, features and setting explained may be subject to the change without notice.
We apologize for any inconvenience that such changes may cause.

Vestax Corporation

Head Office

1-18-6 Wakabayashi, Setagaya-ku, Tokyo 154-0023 Japan
Phone : 81-(0)3-3412-7011 Fax : 81-(0)3-3412-7013
Web : <http://www.vestax.com> E-mail : info@vestax.com

Vestax Europe Ltd.

Unit 5 Riverway Industrial Park Alton Hampshire GU34 2QL, England, U.K.
Phone : 44(0)142083000 Fax : 44(0)142080040
Web : <http://www.vestax.co.uk> E-mail : info@vestax.co.uk



Vestax Corporation 1-18-6 Wakabayashi, Setagaya-ku, Tokyo 154-0023 Japan
Telephone : 81-(0)3-3412-7011 Fax : 81-(0)3-3412-7013. www.vestax.jp

***This is to certify that the product subsequently referred to
was designed and manufactured in conformity with the
following EC directives;***

89/336/EEC (EMC)

73/23/EEC (LVD)

Model type : Hybrid Musical Instrument / Controller

Model Description : Sound Module

Model Number : FADERBOARD

Applicable Standards :


- EN61000-6-1:2001 Electromagnetic compatibility (EMC) - Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments
- EN61000-3-2:2000 Electromagnetic compatibility (EMC) - Part 3-2: Limits - Limits for harmonic current emissions (equipment input current up to and including 16 A per phase)
- EN61000-3-3:1995 / A1:2001 Electromagnetic compatibility (EMC) - Part 3-3: Limits - Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems - Equipment with rated current <16 A per phase and not subject to conditional connection
- EN55013:1990+A12:1994+A13:1996 Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment (including amendments A12:1994 and A13:1996) (CISRP13:1975/Amdt:1983, modified)

Date : Friday, May 30, 2003

Place of Issue : Vestax Corporation, 1-18-6 Wakabayashi, Setagaya-ku,
Tokyo 154-0023 Japan

**Manufacturers Authorized
Signature :**

Function of Signatory :


Toshihide Nakama

Director