

OWNER'S MANUAL

Vestax TURNTABLE UPGRADE KIT VK-2300

Thank you for purchasing the Vestax VK-2300, Professional Direct Drive Turntable Upgrade Kit. Please read this owner's manual carefully, so that you will fully understand all of the special features and enjoy the full use of this product.

IMPORTANT NOTE

The packing material used for the PDX-2000 differs from that needed to accommodate the PDX-2300. PLEASE MAKE SURE to cut a space for the pitch bend joystick if you are transporting this unit with PDX-2000 packaging materials.

PDX-2300 Features

- Advanced analogue turntable.
- Enhanced pitch control. Fast and accurate beat matching adjustment with a 100mm $\pm 10\%$ fine pitch fader. Ultra pitch control with a $\pm 50\%$ control fader. Combined the total amount you can adjust the pitch by is a huge $\pm 60\%$ pitch. Furthermore, with the pitch bend joystick, you can quickly push or pull the pitch for smooth mixes or dynamic effects.
- Digital Pitch Display. A large display, showing the current pitch setting, allows you to accurately set the pitch or when needed to, make adjustments perfectly.

Advanced Pitch Control Features



The PDX-2300 features advanced digital pitch control features. Through three different controls you are able to adjust the playing pitch by up to $\pm 60\%$.

PITCH BEND & ULTRA SHIFT

Using the pitch bend joystick will allow you to quickly pull or push the playing pitch of this unit. To pull means to slow down, push means to speed up. Pushing the joystick towards the tone arm will result in you being able to pull (minus) the playing pitch. Pushing the joystick in the opposite direction will result in you being able to push (positive) the playing pitch. It is possible to set the increment of pitch adjustment or the pitch span to 1, 2, 3, & 6%. The basic pitch span setting is 2%. To change the pitch span setting press the joystick down. Pushing the joystick down once will set the span to 1%, twice 2%, three times 3% and a fourth time will adjust it to 6%. You can also ultra shift the pitch by $\pm 50\%$ by pushing the joystick left or right. A movement to the left will speed up the pitch momentarily whilst a push to the right will slow down the pitch momentarily. This momentary ultra shift is always set to $\pm 50\%$.

NOTE

When the power is turned on, pitch bend is set at $\pm 2\%$.

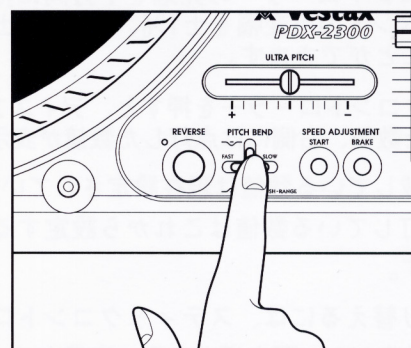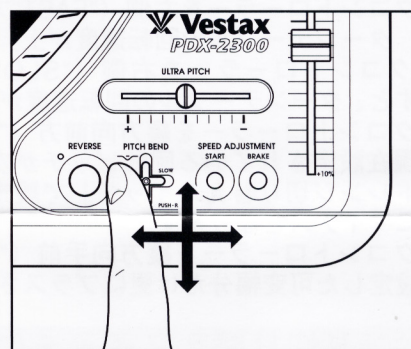

Display

Every time the stick controller is pressed, the display changes as shown below.

